


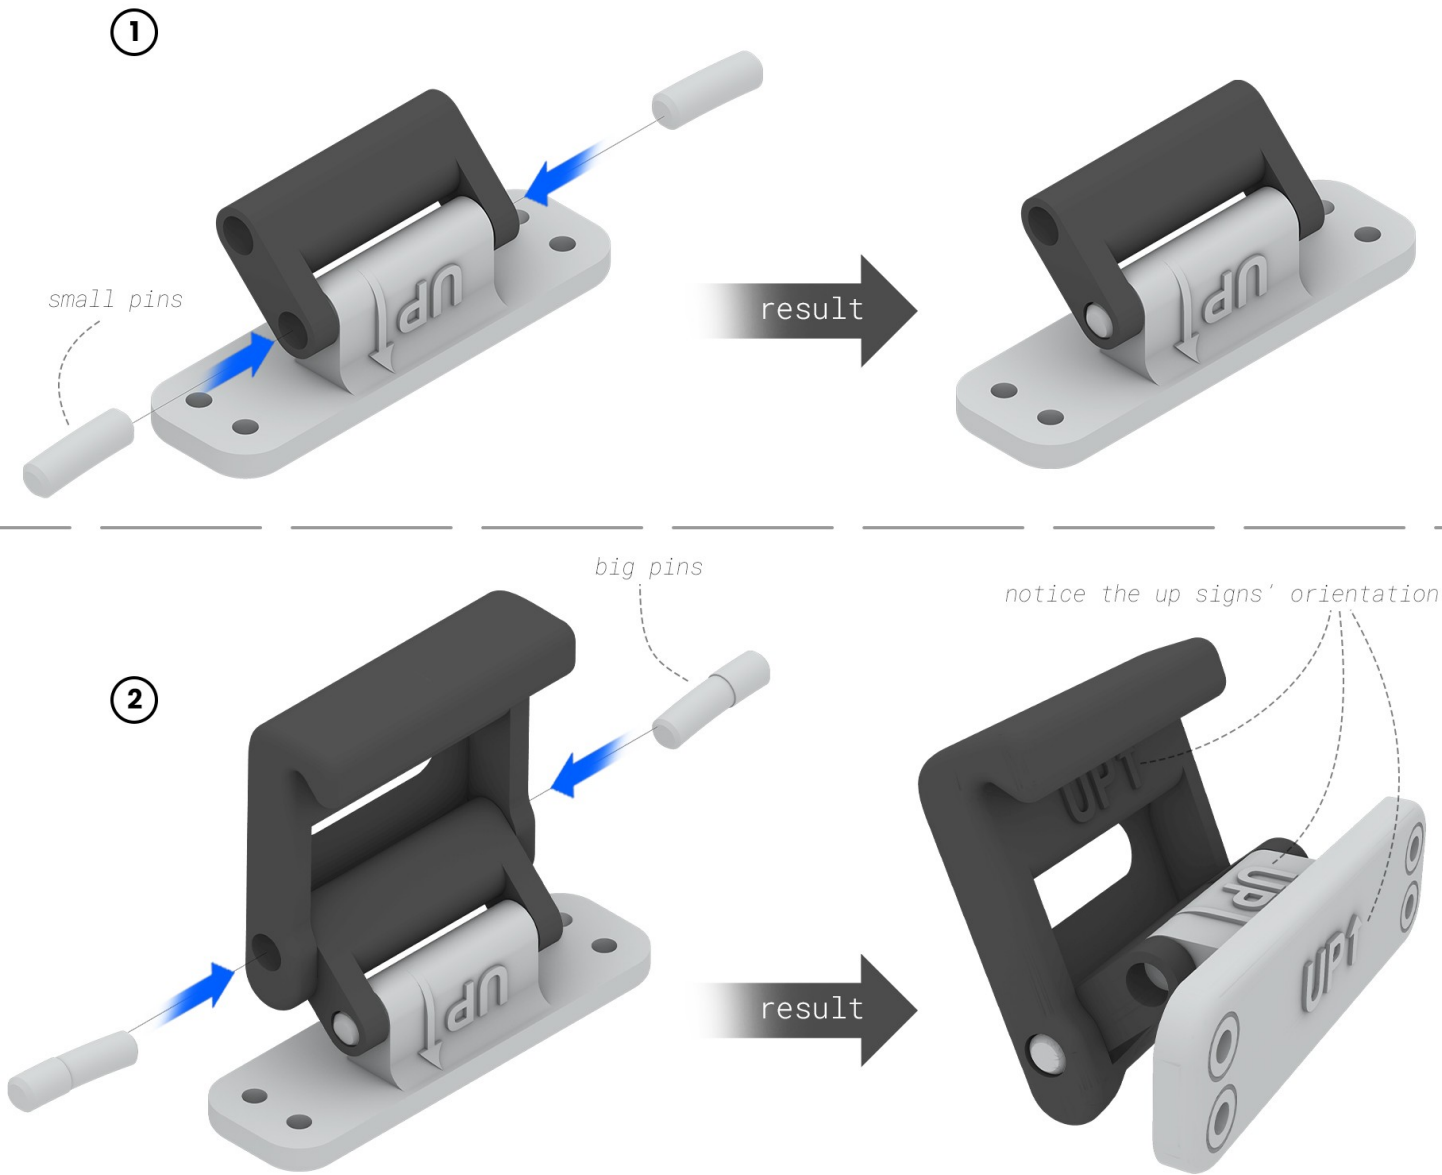
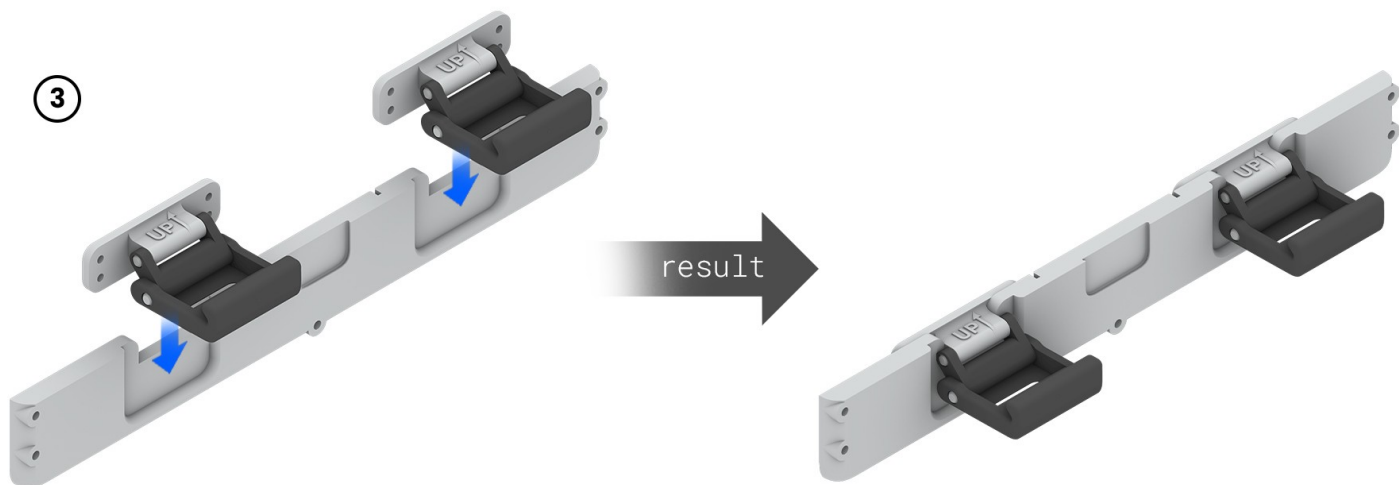


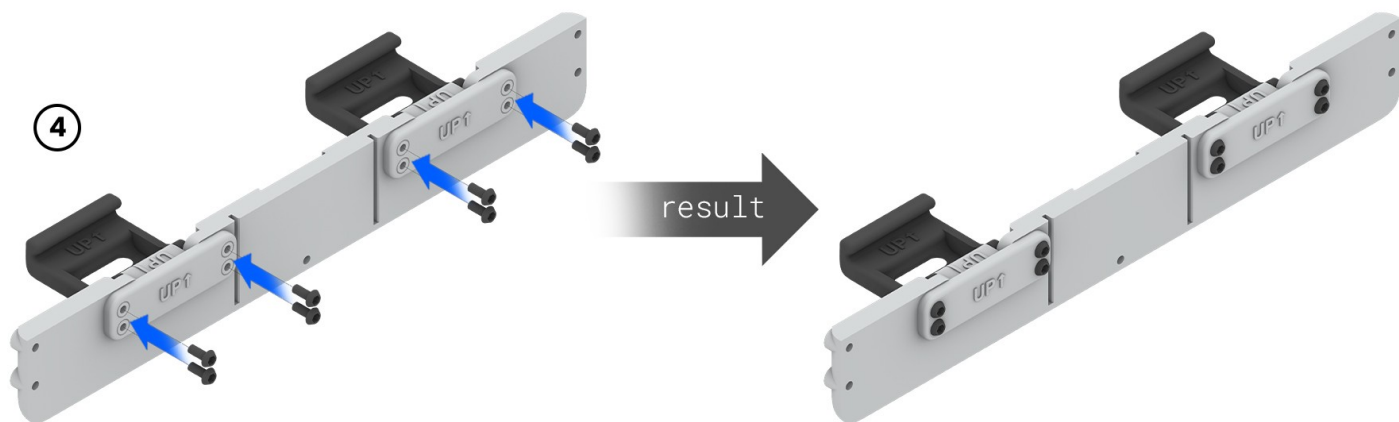



1. attach "lock inner part" to the "lock holder", by inserting small pins
2. attach "lock outer part" to "lock inner part", by inserting big pins

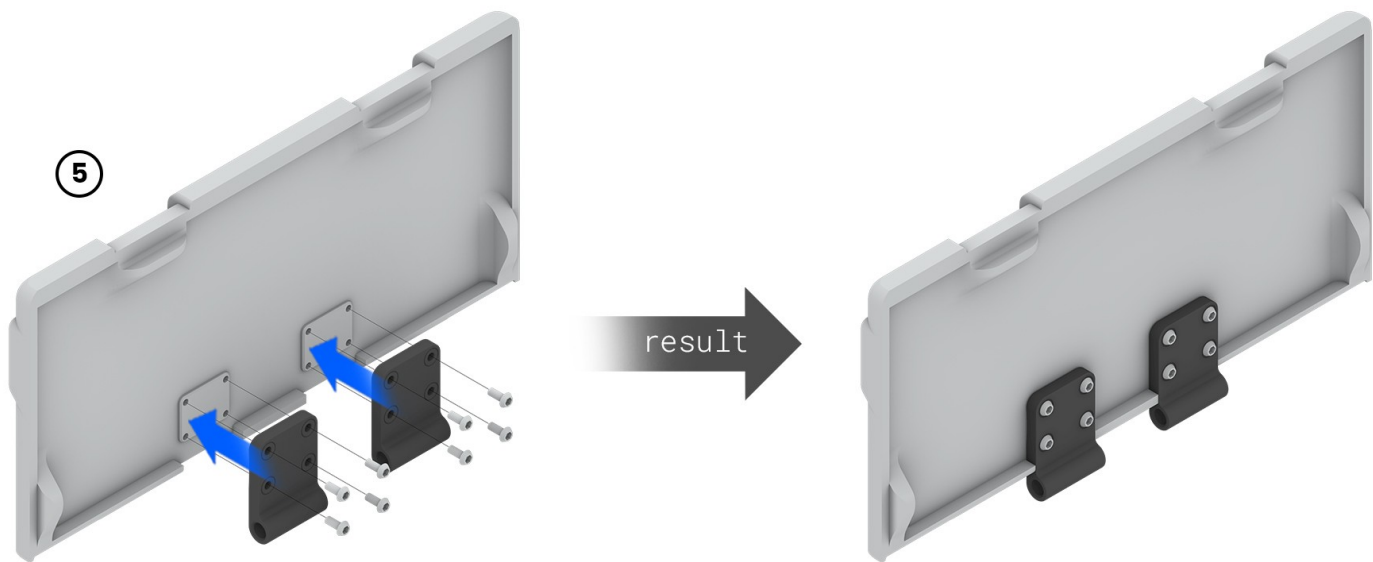



3. fix lock on a facade with "up" sign looking up
4. use M4 14MM bolts to fix it

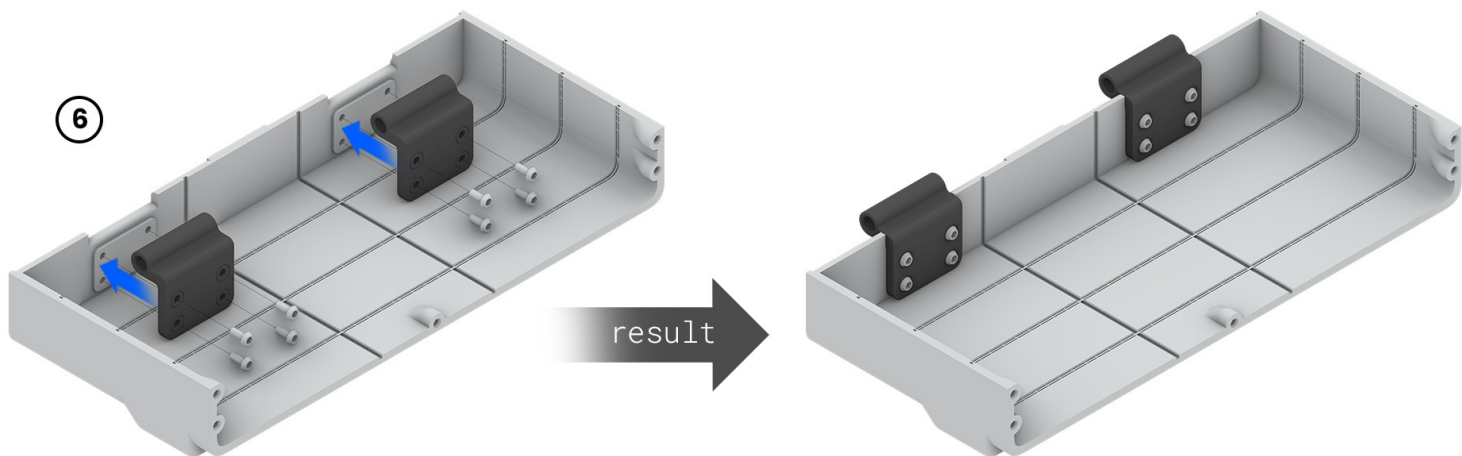

5. use M4 14MM bolts to fix Top Hinge on a roof
6. use M4 10MM bolts to fix Bottom Hinge on a module

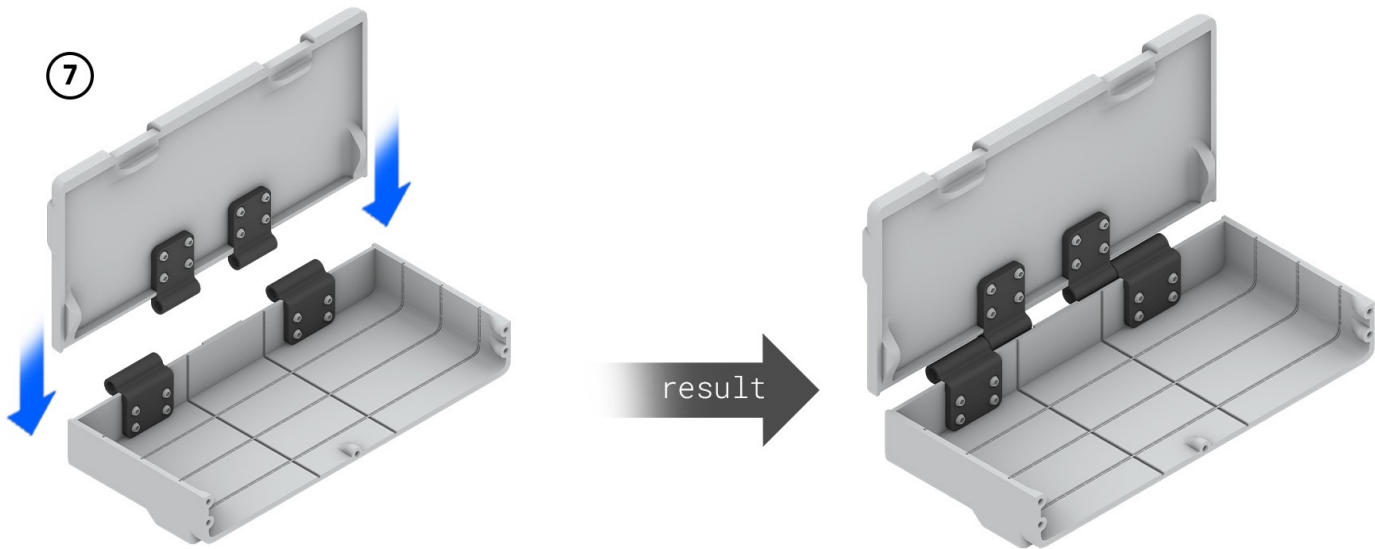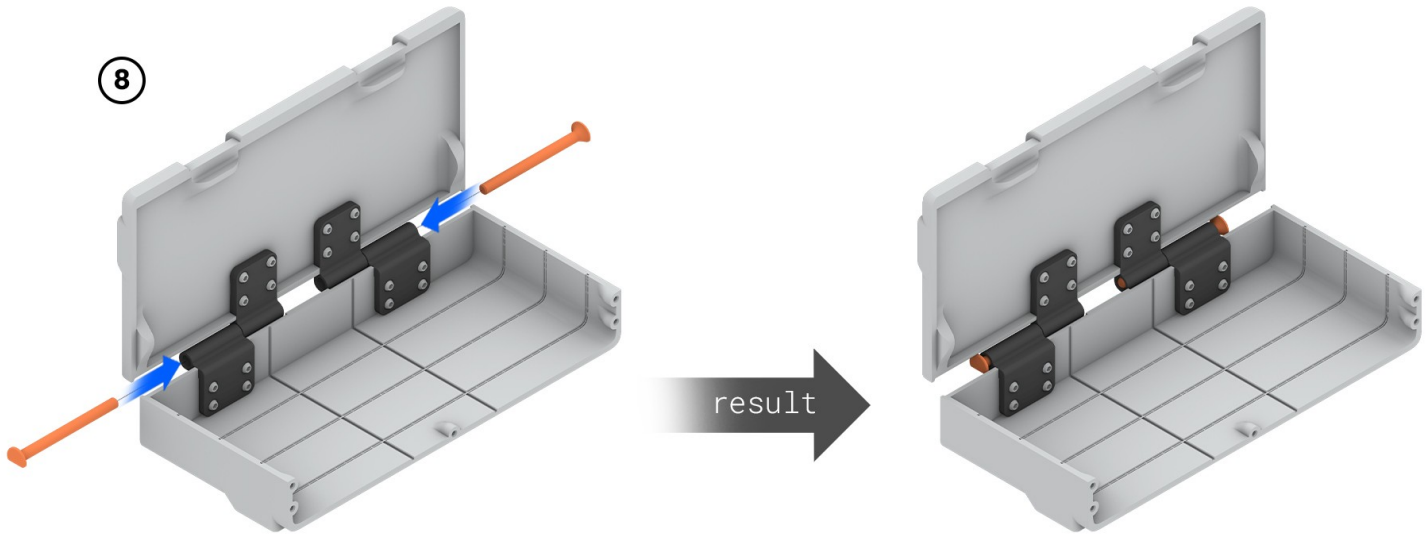


- 7. connect roof and module of a sustainer
- 8. fix them together with two rods

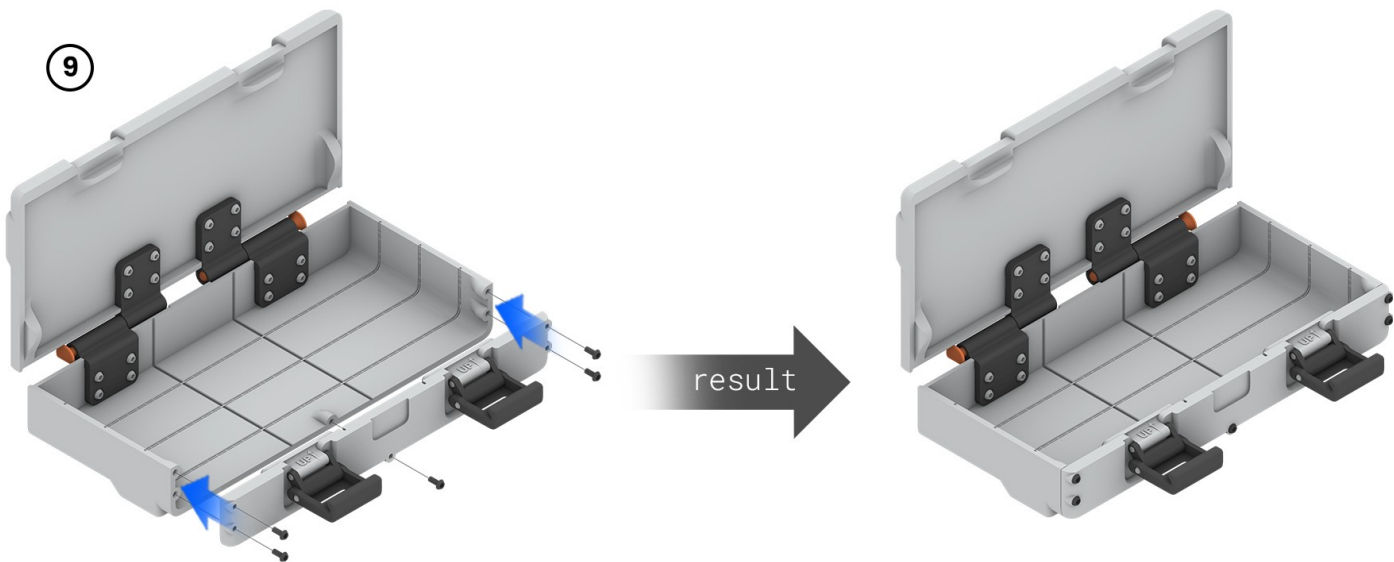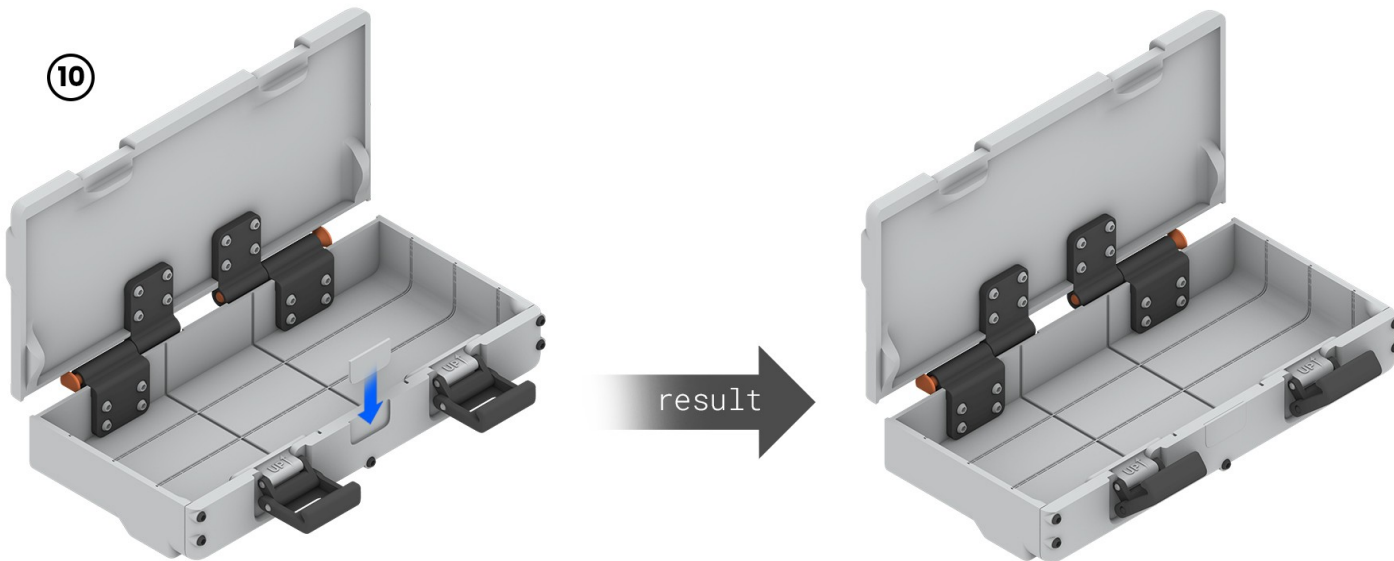


9. fix previously assembled facade, to a module with M4 20MM bolts
10. slide in a label

11

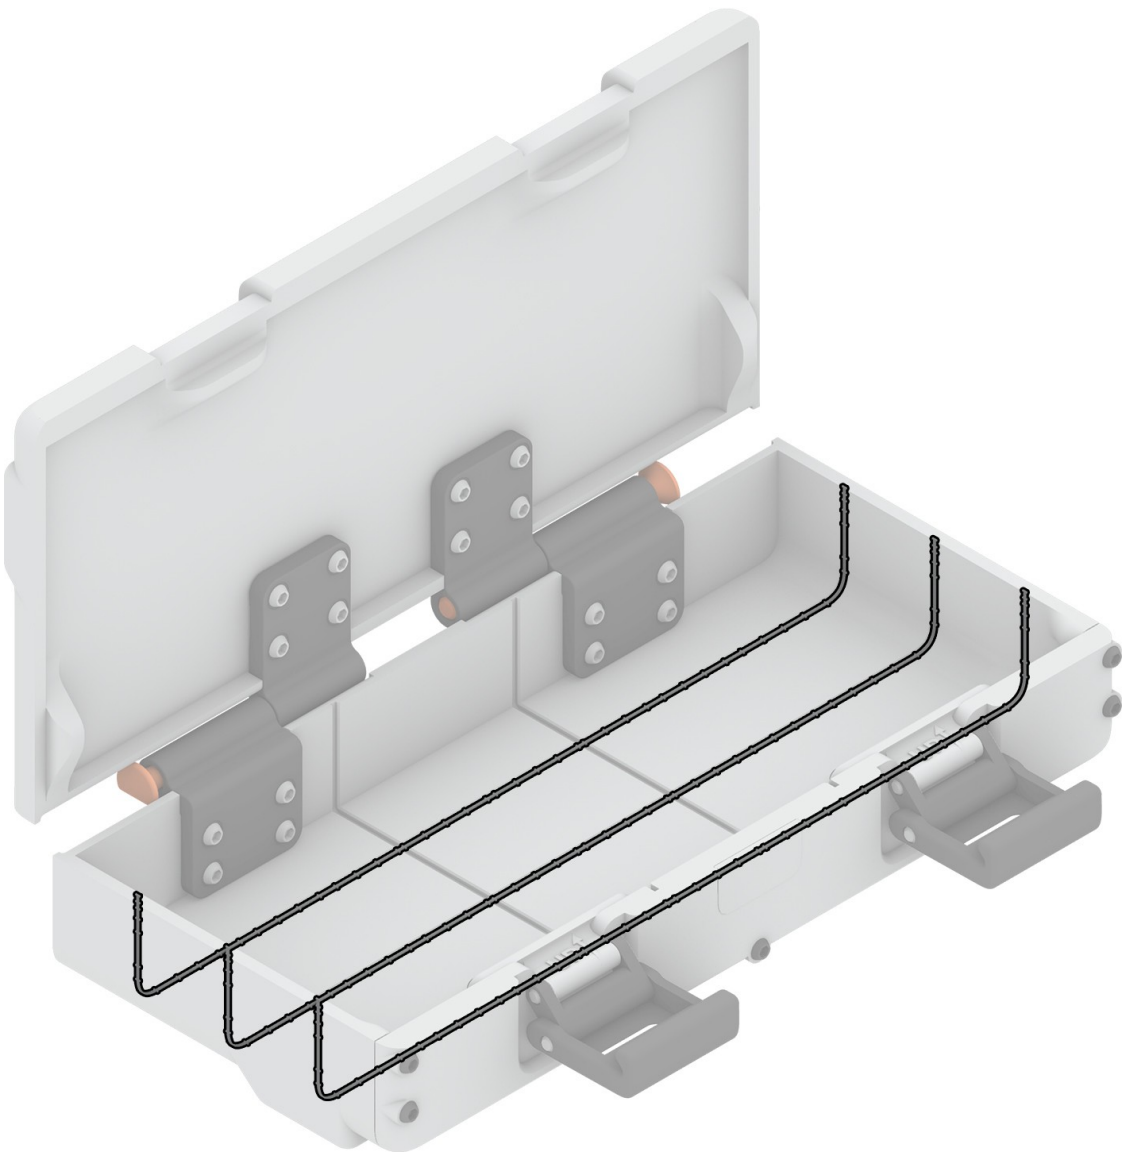

11. remove manual supports, before filling it with dividers

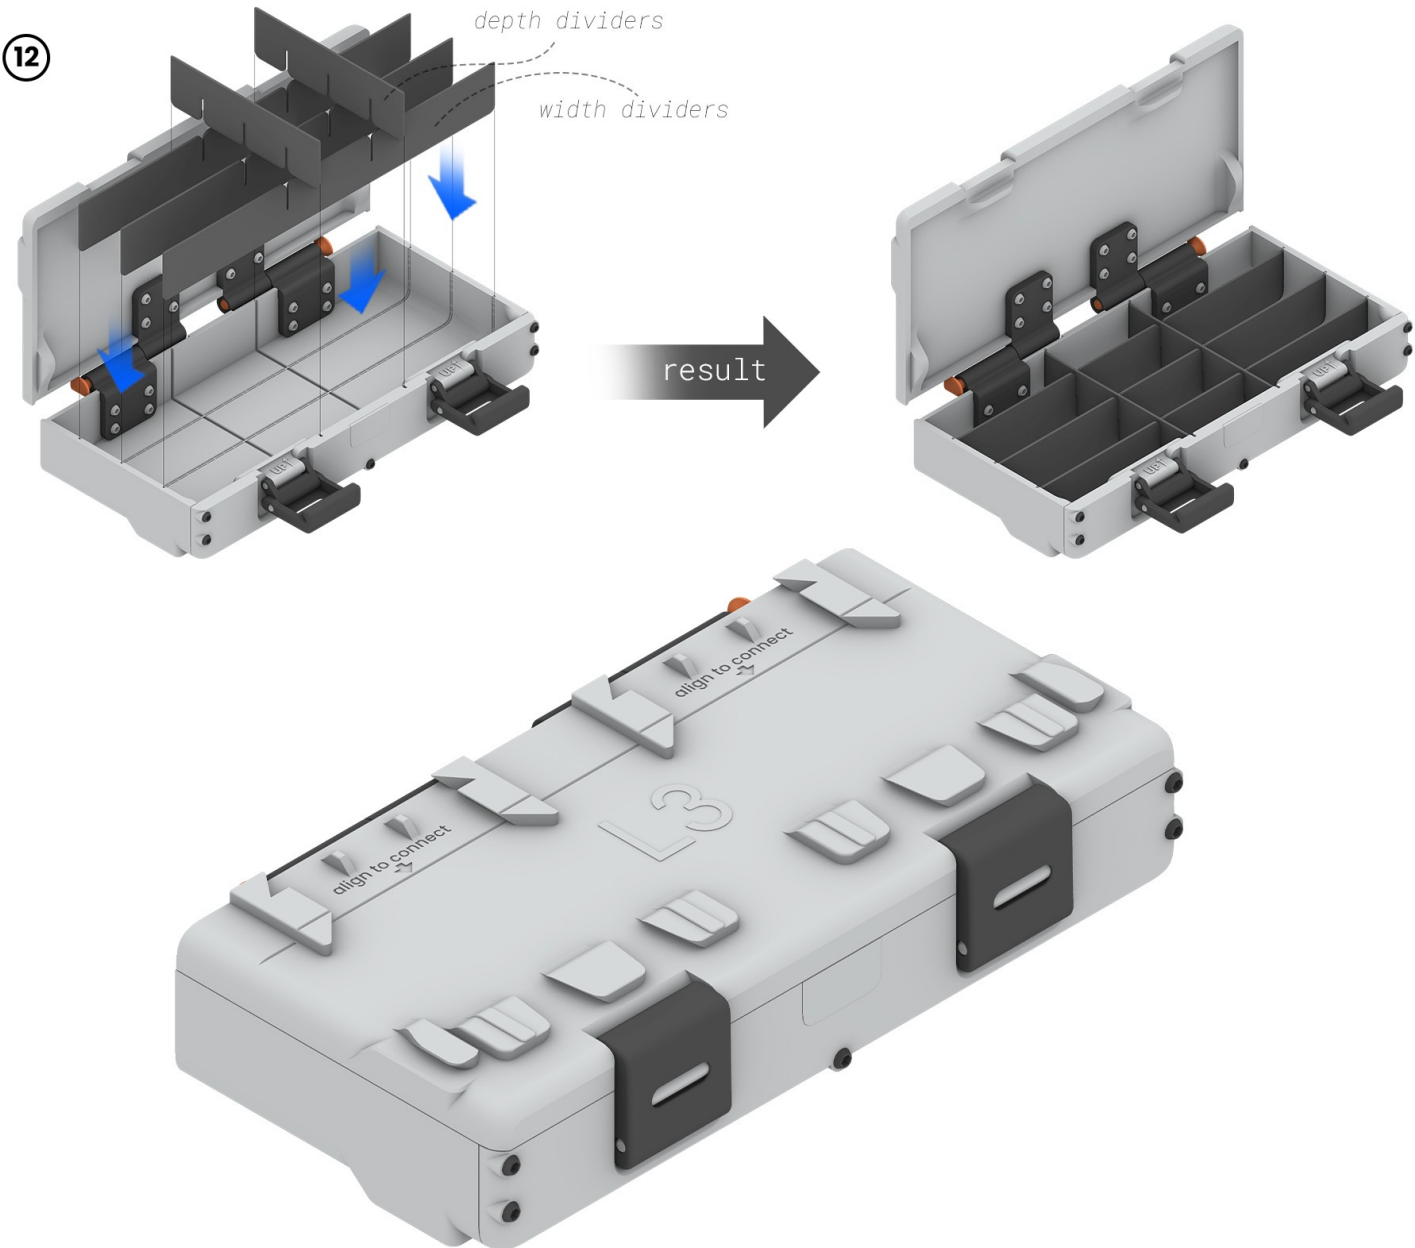

12. insert dividers, the way you need